

Jaw Tips

 
Argensinter standard



Jaw Tips


(according to Argensinter standard)

Type: C

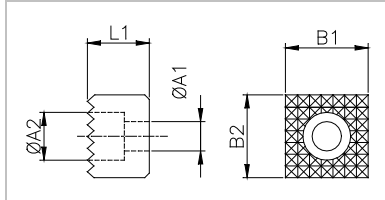


Code	B1	B2	L1	A1	A2
G C 6	15.87	15.87	12.7	5.2	8.2
G C 7	19.05	19.05	16	6.7	11

 Type: D

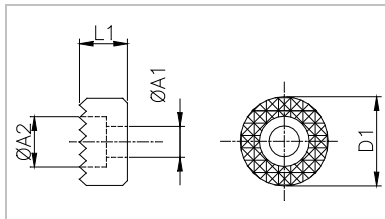


Code	D1	L1	A1	A2
G D 4	15.87	12.7	5.2	8.2
G D 6	19.05	16	6.7	11

 Type: K

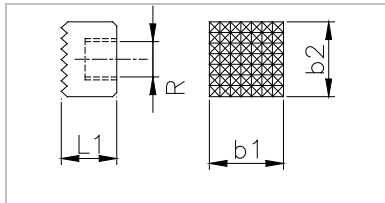


Code	B1	B2	L1	R
G K 4	12.7	12.7	9.5	M6
G K 5	15.87	15.87	9.5	M6
G K 6	19.05	19.05	12.7	M6
G K 7	19.05	19.05	9.5	M6
G K 8	12.7	44.50	9.0	M6

 Type: L

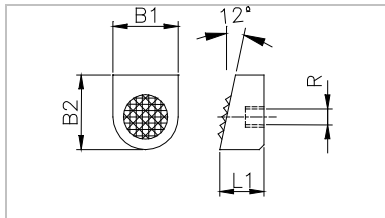


Code	B1	B2	L1	R
G L 4	14.5	16	8	10-32 UNF
G L 5	19	22.5	13.5	10-32 UNF

 Type: M

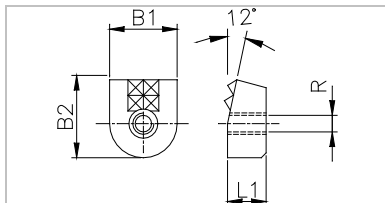

Code	B1	B2	L1	R
G M 4	14	16.5	8	10-32 UNF

 Type: N

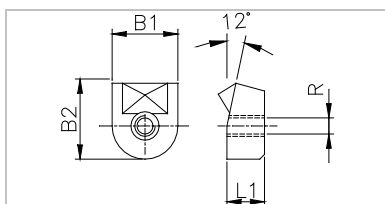


Code	B1	B2	L1	R
G N 4	14	16.5	8	10-32 UNF

Jaw Tips

(according to Argensinter standard)

Page 3 of 4

 Type: R

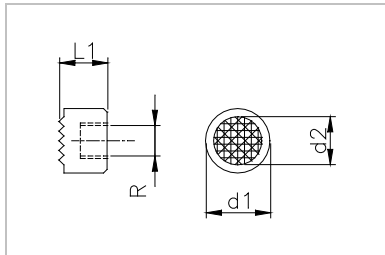

Code	D1	L1	R
G R 3	11.9	9.5	10-32 UNF
G R 4	12.6	9.5	10-32 UNF
G R 5	12.6	12.7	10-32 UNF
G R 6	15.5	9.5	M6
G R 7	15.87	9.5	M6
G R 8	19.05	9.5	M6
G R 9	19.95	10	M6

For further information, please do not hesitate to contact us or visit our web site at www.argensinter.com

Argensinter S.R.L. – Hard Metal and Special Cutting Tools
Tacuarí 925 (B1704FJM) Ramos Mejía.
Provincia de Buenos Aires, Argentina
Phone: (+54) 11 4658 7637 – Fax: (+54) 11 4656 8028
email: sales@argensinter.com - Web site: <http://www.argensinter.com>